


Before You Assemble

Read this first. It applies to every Cabford ready-to-assemble cabinet.

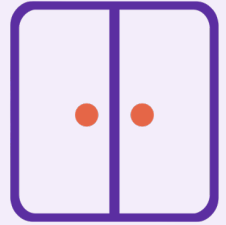

Before you start

- **Unpack on a soft surface.**
Open each carton on a clean floor or the flattened box so finished faces don't get scratched.
 - **Check your parts.**
Lay out the panels and match the hardware to the parts table on your cabinet's page.
 - **Have these tools ready.**
Screwdriver bits that fit the supplied screws, a tape measure and a level. A rubber mallet helps seat the dowels.
 - **Snug, not tight.**
If you use a drill/driver, set a low clutch. Stop once the panels pull together.
 - **Get a helper.**
Two people make wider cabinets much easier to square up and stand upright.
- **Hang wall cabinets on wall studs with screws suited to your wall, or have a pro install them.**
- **Build tall cabinets lying down, stand them up with a helper, and anchor them to the wall.**

Which guide do I need?

Match the letters at the start of your cabinet code (e.g. DB24-3 starts with DB).

CABINETS	CODE STARTS WITH	GUIDE
Base cabinets	B, DB, BBC, BER	Base
Sink bases	SB	Sink Base
Wall cabinets	W, WBC, WER	Wall
Tall & pantry cabinets	PC, MOC, OC	Tall & Pantry

Missing or damaged part? Stop and contact us before you continue.

Send your order number and a photo. Keep the cartons until your cabinets are assembled.
These sheets show our standard build. If a sheet packed with your cabinet differs, follow the packed sheet.

Support@cabford.com

(713) 690-8885

Mon-Fri 8:30am-4:30pm CT

PART	SIZE	WHAT IT DOES
Connector screw	M6 x 50	Joins the cabinet panels. Turn until the joint pulls tight, then stop.
Dowel	Ø8 x 35	Locates panels. Seat it in the predrilled hole before joining the panels.
Shelf support	Ø5	Holds adjustable shelves. Use matching holes on both sides.
Adjustable leg	4¾" ± ¼"	Base and tall cabinets stand on these. Twist to raise or lower.
Hinges	Soft-close	Corner cabinets also use 155° and 270° hinges, as shown on their page.
Drawer slides	19 5/8", N and H types	Your cabinet's page shows which type goes where.
Screws	Ø3.5 x 35, Ø4 x 16	Fix hinges, slides and fittings into their predrilled holes.

Each cabinet's page has its own parts table. Hardware can vary by cabinet.

Questions while you build?

Send your order number and a photo of the step you're on.

Support@cabford.com · (713) 690-8885

Mon-Fri 8:30am-4:30pm CT

Good habits

- 1 Box first, then the rest.**
Build the cabinet box completely before fitting doors, drawers and shelves.
- 2 Back panel fully in its grooves.**
Slide it in at the step your cabinet's page shows. A seated back panel keeps the box square.
- 3 Check it's square.**
Measure both diagonals of the box. When they match, the box is square.
- 4 Level as you go.**
Set the legs, then check with a level front to back and side to side.
- 5 Drawer slides.**
Line up the slide's front hole with the predrilled hole at the front edge.
- 6 Fine-tune doors last.**
Even out door gaps with the adjustment screws on each hinge.