


Sink Base Assembly Guide

Step-by-step diagrams for Cabford sink base cabinets.

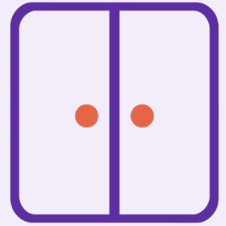

Before you start

- **Unpack on a soft surface.**
Open each carton on a clean floor or the flattened box so finished faces don't get scratched.
- **Check your parts.**
Lay out the panels and match the hardware to the parts table on your cabinet's page.
- **Have these tools ready.**
Screwdriver bits that fit the supplied screws, a tape measure and a level. A rubber mallet helps seat the dowels.
- **Snug, not tight.**
If you use a drill/driver, set a low clutch. Stop once the panels pull together.
- **Get a helper.**
Two people make wider cabinets much easier to square up and stand upright.

Find your cabinet

The code is in your order and in the product SKU (e.g. SLM-B12-BOX-RTA is a B12).

CABINET	CODES	PAGE
Sink base · 2 doors	SB30, SB33, SB36	2


Missing or damaged part? Stop and contact us before you continue.

Send your order number and a photo. Keep the cartons until your cabinets are assembled.
These sheets show our standard build. If a sheet packed with your cabinet differs, follow the packed sheet.

Support@cabford.com

(713) 690-8885

Mon-Fri 8:30am-4:30pm CT

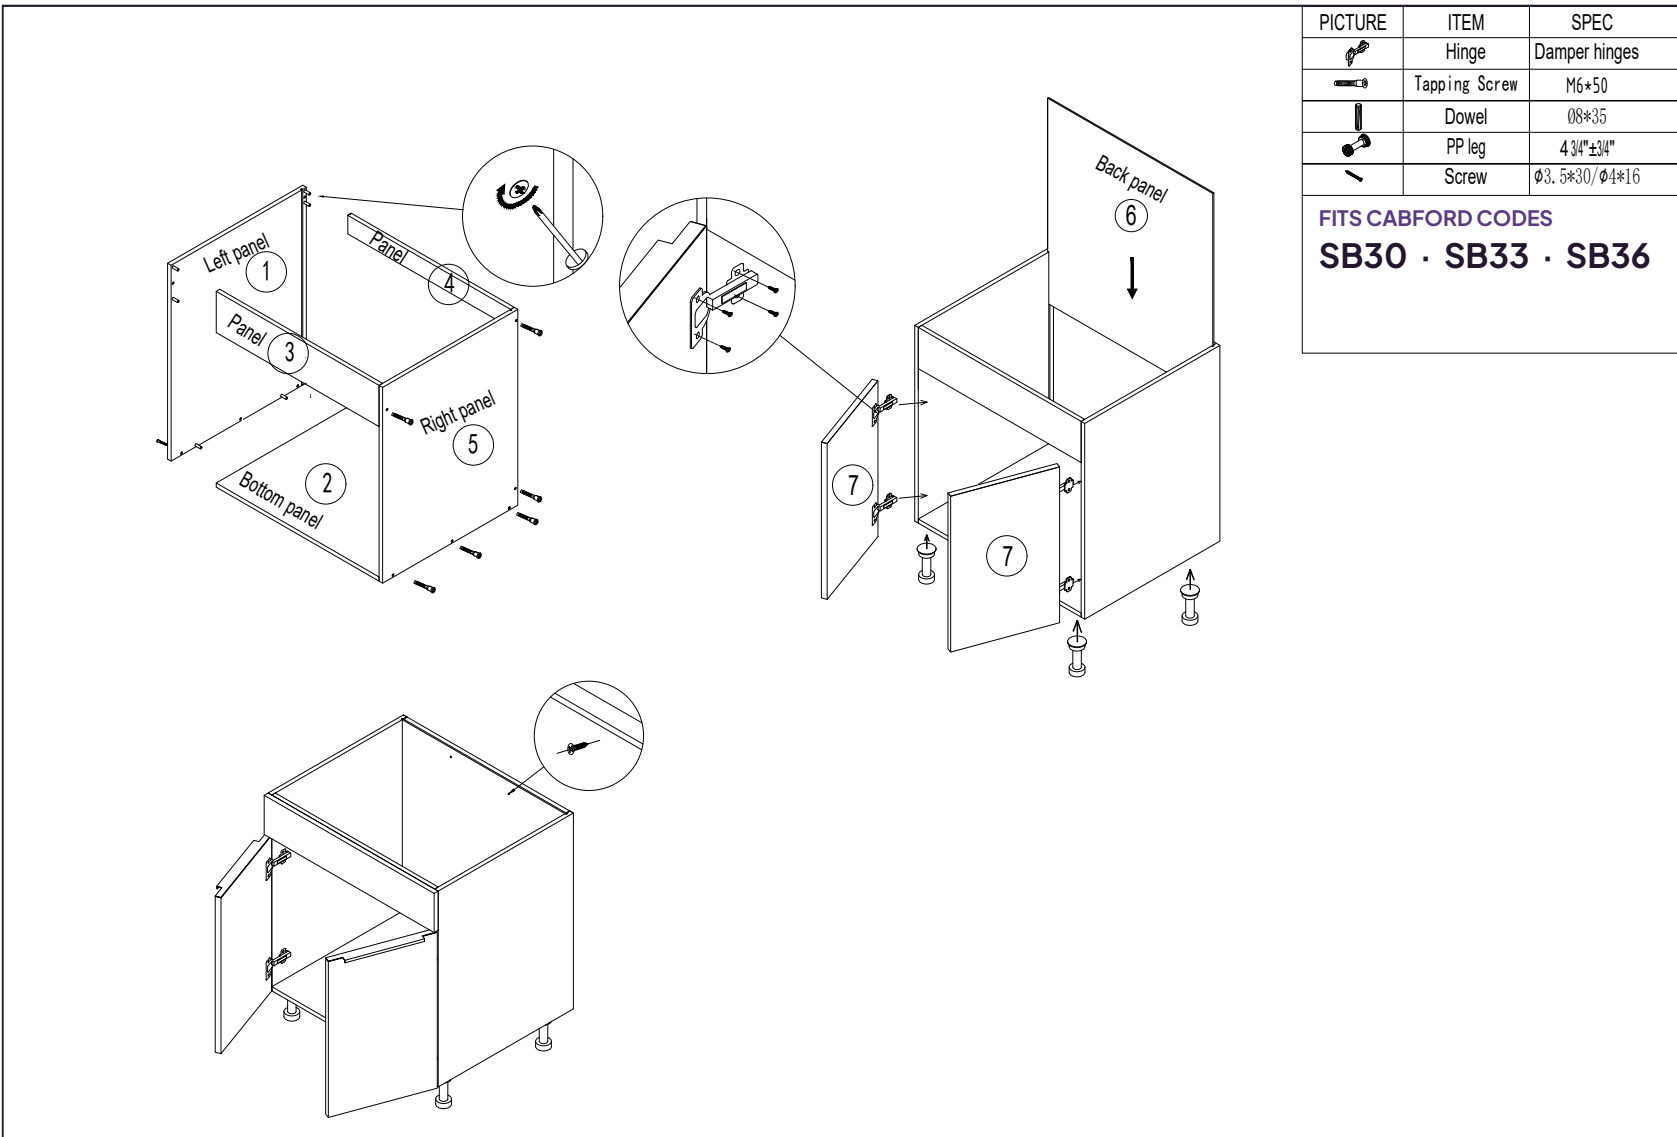

1

Join the left (1) and right (5) panels to the bottom (2) with dowels and M6x50 connector screws.

2

Fit rails 3 and 4, then slide the back panel (6) down into its groove.

3

Screw on the four legs and level the cabinet.

4

Mount the hinges and hang both doors (7). Cut plumbing openings only after the cabinet is placed.