


Wall Cabinet Assembly Guide

Step-by-step diagrams for every Cabford wall cabinet. Find your cabinet code below.

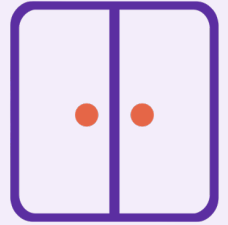

Before you start

- Unpack on a soft surface.**
 Open each carton on a clean floor or the flattened box so finished faces don't get scratched.
 - Check your parts.**
 Lay out the panels and match the hardware to the parts table on your cabinet's page.
 - Have these tools ready.**
 Screwdriver bits that fit the supplied screws, a tape measure and a level. A rubber mallet helps seat the dowels.
 - Snug, not tight.**
 If you use a drill/driver, set a low clutch. Stop once the panels pull together.
 - Get a helper.**
 Two people make wider cabinets much easier to square up and stand upright.
- Some sizes share a diagram with a taller or shorter cabinet of the same type; the number of shelves can differ.
- This guide covers assembly. Hang wall cabinets on wall studs with screws suited to your wall, or have a pro install them.

Find your cabinet

The code is in your order and in the product SKU (e.g. SLM-B12-BOX-RTA is a B12).

CABINET	CODES	PAGE
Wall cabinet · 1 door, 2 shelves	W1236, W1536, W1836, W1230, W1530, W1830	2
Wall cabinet · 1 door, 3 shelves	W1242, W1542, W1842, W2442	3
Wall cabinet · 2 doors, 2 shelves	W2430DD, W3030, W3630, W2436DD, W3036, W3636	4
Wall cabinet · 2 doors, 3 shelves	W2442DD, W3042, W3642	5
Bridge wall cabinet · 2 doors, 12" – 18" high	W3012, W3015, W3018, W3612, W3615, W3618	6
Bridge wall cabinet · 2 doors, 24" high	W3024, W3624	7
Blind corner wall cabinet	WBC3030, WBC3036, WBC3042	8
Easy reach corner wall cabinet	WER2430, WER2436, WER2442	9


Missing or damaged part? Stop and contact us before you continue.

Send your order number and a photo. Keep the cartons until your cabinets are assembled.
 These sheets show our standard build. If a sheet packed with your cabinet differs, follow the packed sheet.

Support@cabford.com

(713) 690-8885

Mon-Fri 8:30am-4:30pm CT

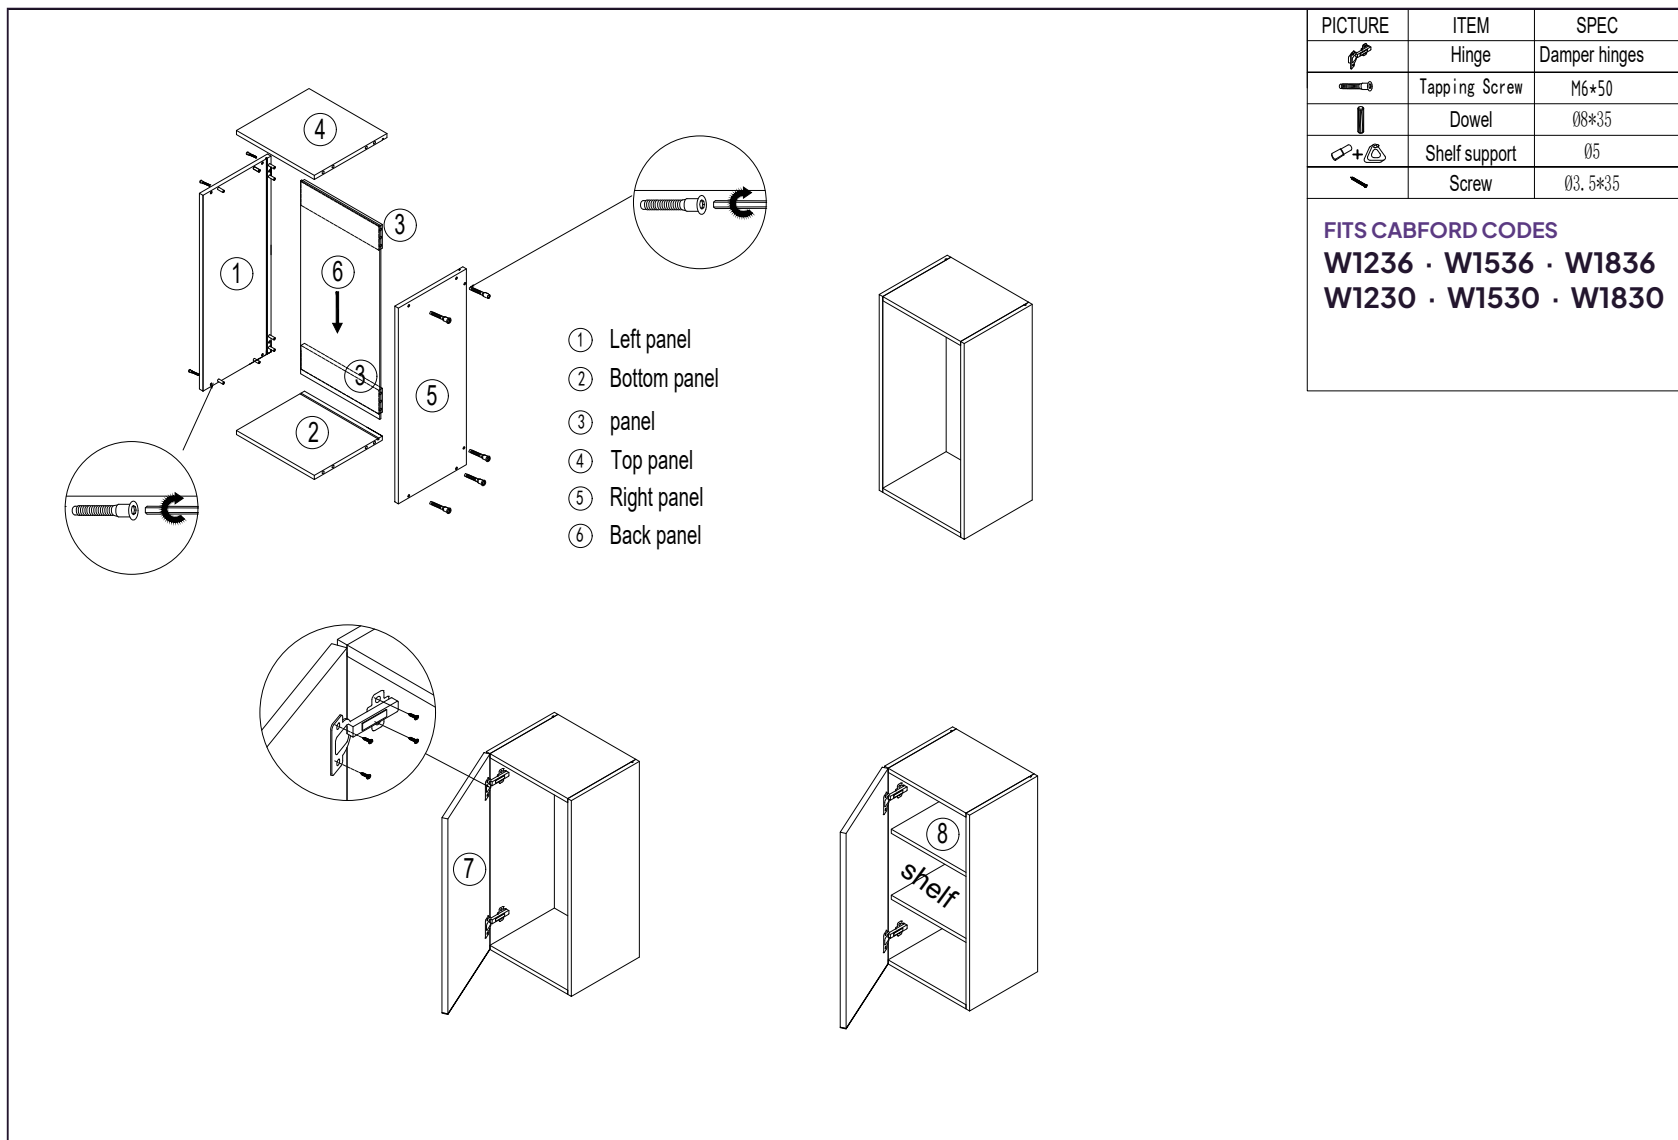

1

Join the left panel (1) to the bottom (2) and top (4) with dowels and M6×50 connector screws.

2


Slide the back panel (6) down between the two rails (3).

3



Fix the right panel (5) with connector screws.

4

Mount the hinges, hang the door (7) and set the shelves (8) on their supports.

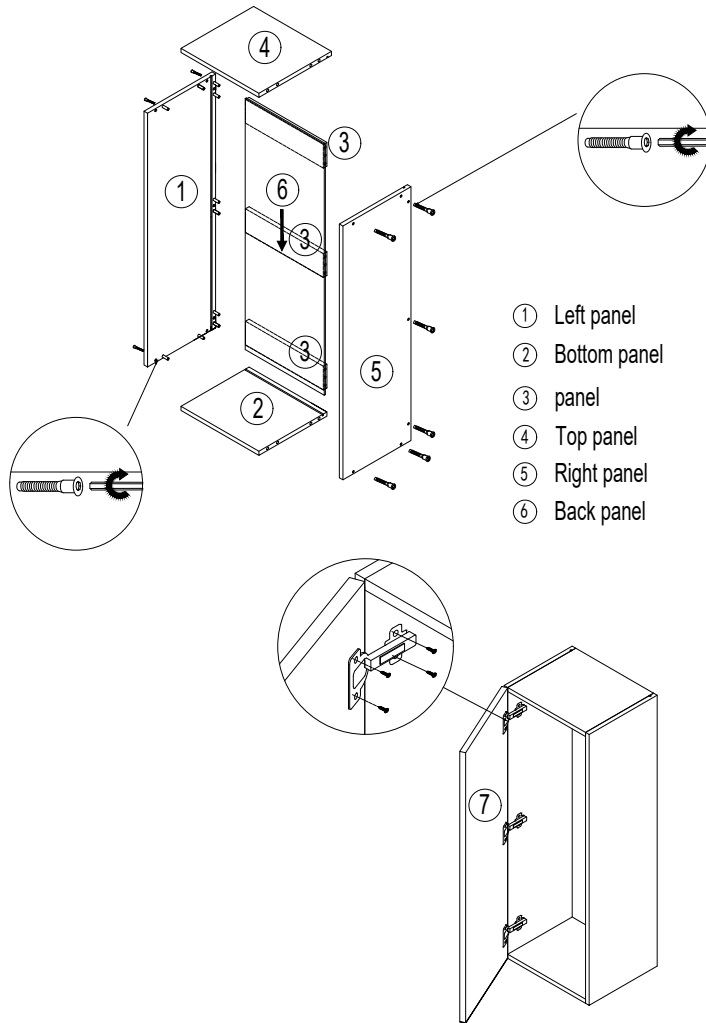

- ① Left panel
- ② Bottom panel
- ③ panel
- ④ Top panel
- ⑤ Right panel
- ⑥ Back panel

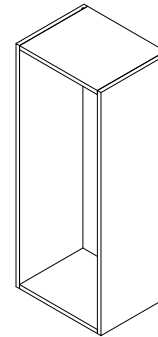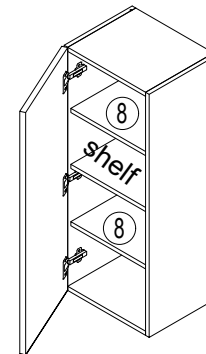

PICTURE	ITEM	SPEC
	Hinge	Damper hinges
	Tapping Screw	M6×50
	Dowel	Ø8×35
	Shelf support	Ø5
	Screw	Ø3.5×35

FITS CABFORD CODES

W1242 · W1542

W1842 · W2442

1

Join the left panel (1) to the bottom (2) and top (4) with dowels and M6×50 connector screws.

2


Slide the back panel (6) down between the two rails (3).

3

Fix the right panel (5) with connector screws.

4

Mount the hinges, hang the door (7) and set the shelves on their supports.

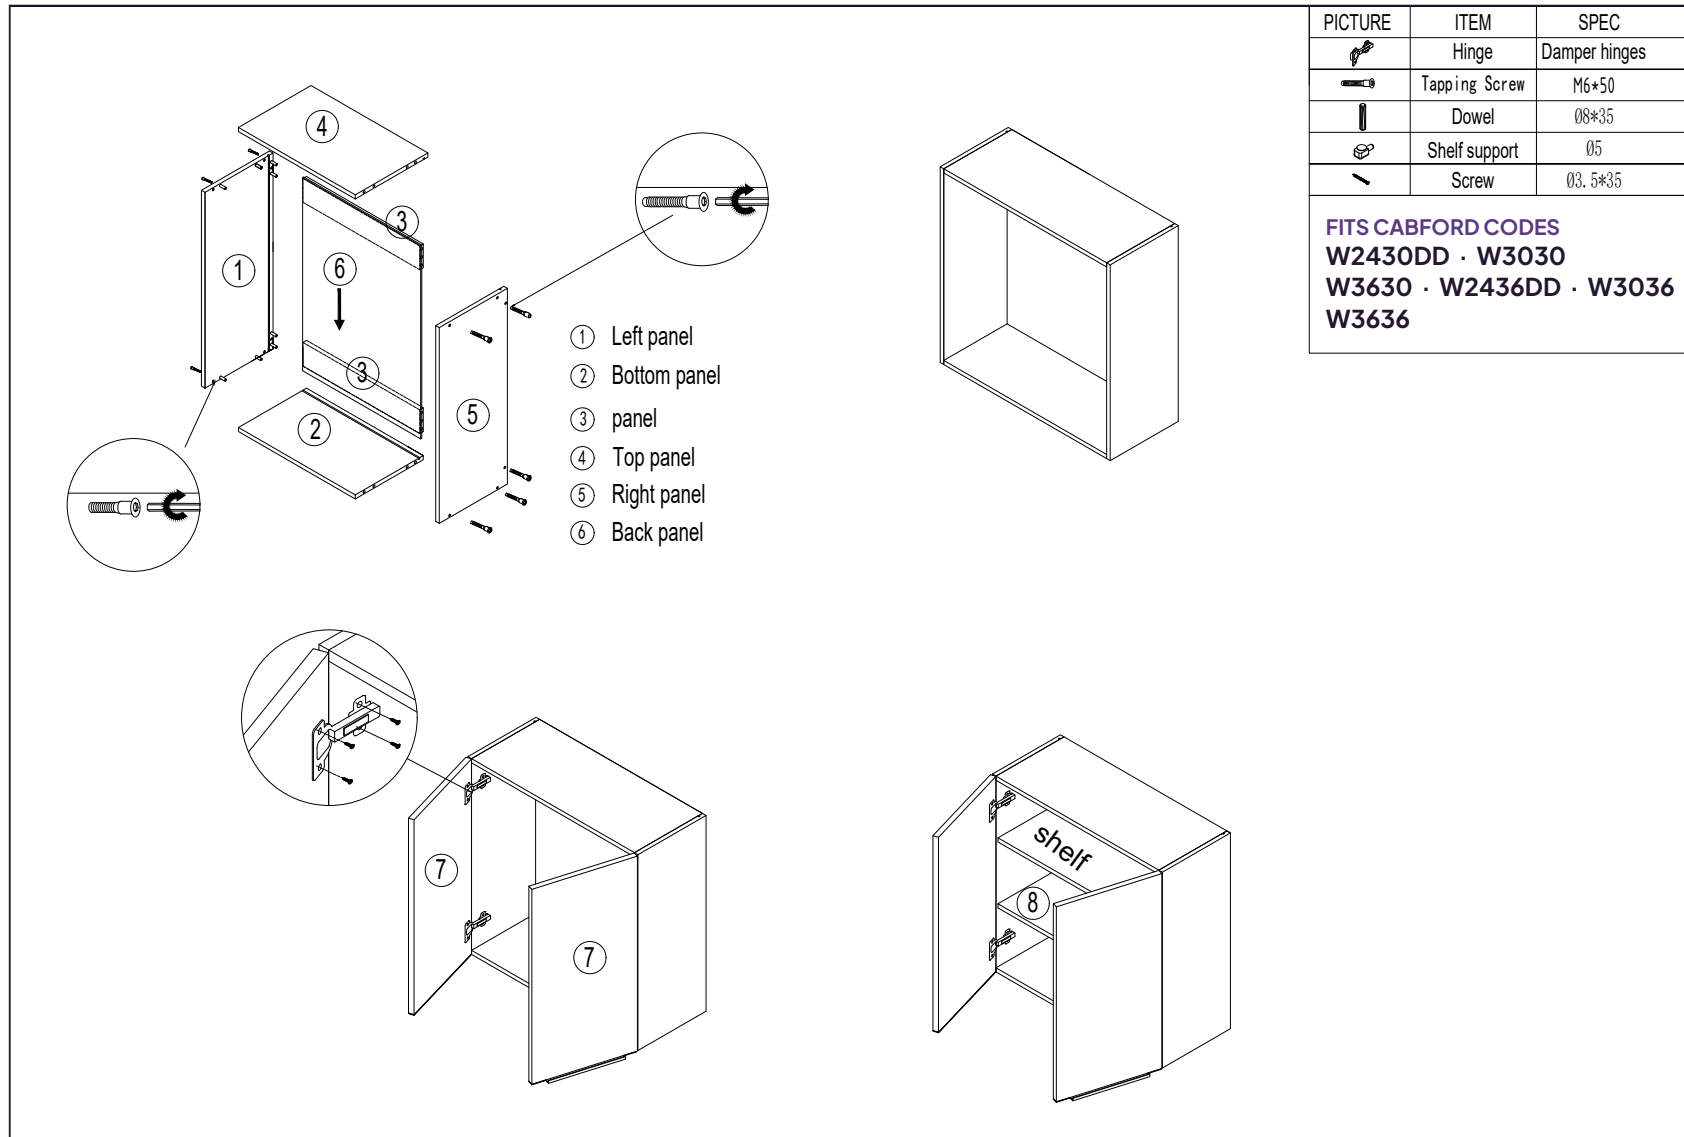

1

Join the left panel (1) to the bottom (2) and top (4) with dowels and M6×50 connector screws.

2


Slide the back panel (6) down between the two rails (3).

3

Fix the right panel (5) with connector screws.

4

Mount the hinges, hang both doors (7) and set the shelf (8) on its supports.

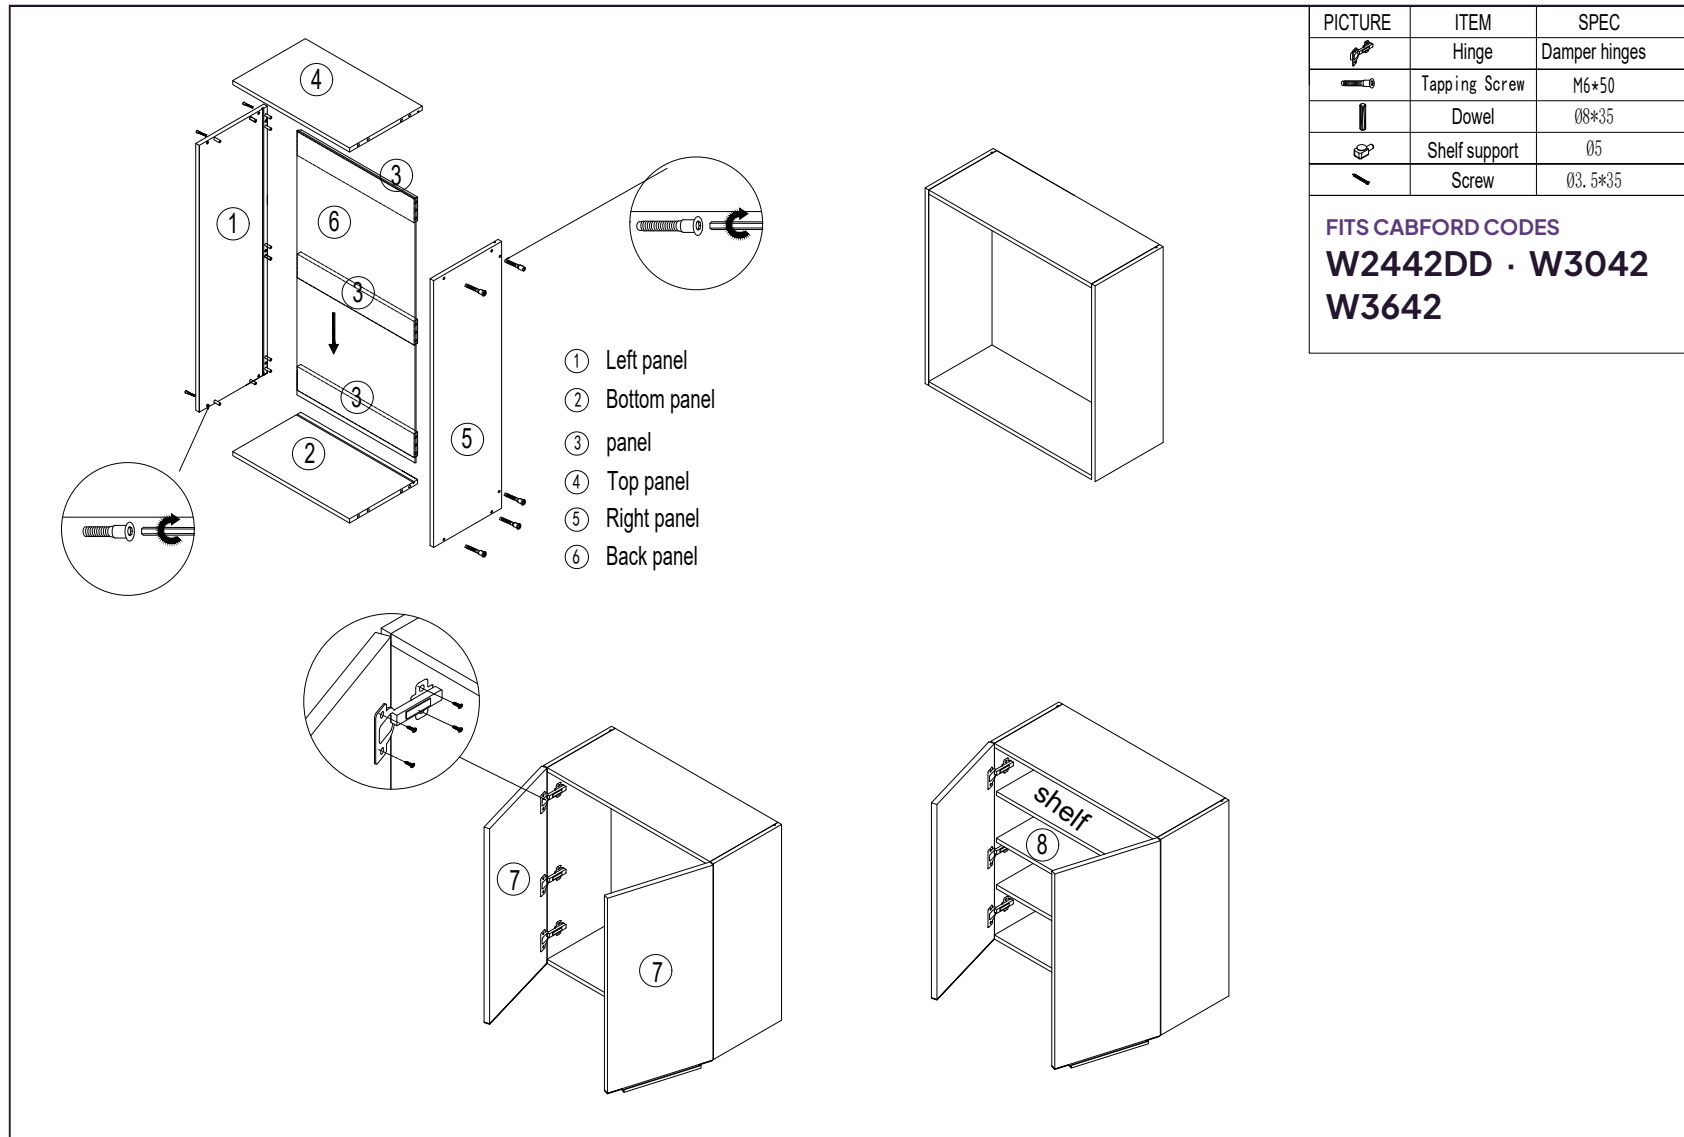

1

Join the left panel (1) to the bottom (2) and top (4) with dowels and M6x50 connector screws.

2





Slide the back panel (6) down between the two rails (3).

3

Fix the right panel (5) with connector screws.

4

Mount the hinges, hang both doors (7) and set the shelves on their supports.

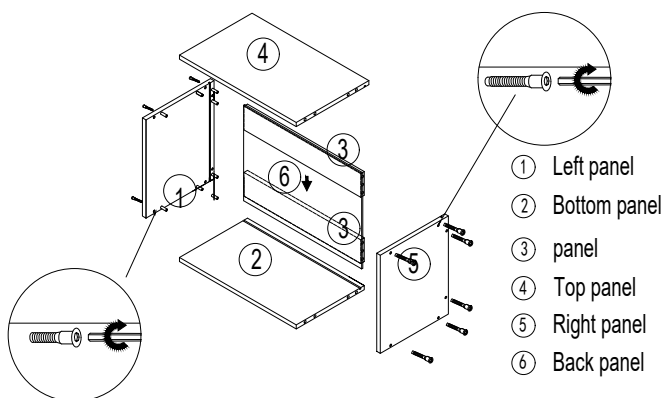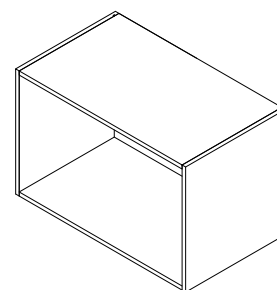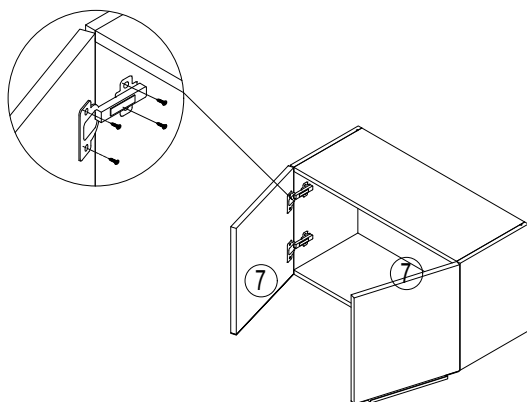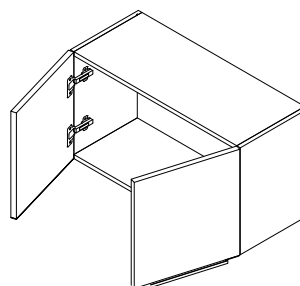

PICTURE	ITEM	SPEC
	Hinge	Damper hinges
	Tapping Screw	M6×50
	Dowel	Ø8×35
	Shelf support	Ø5
	Screw	Ø3.5×35

FITS CABFORD CODES

W3012 · W3015

W3018 · W3612

W3615 · W3618

1

Join the left panel (1) to the bottom (2) and top (4) with dowels and M6×50 connector screws.

2





Slide the back panel (6) down between the two rails (3).

3

Fix the right panel (5) with connector screws.

4

Mount the hinges and hang both doors (7).

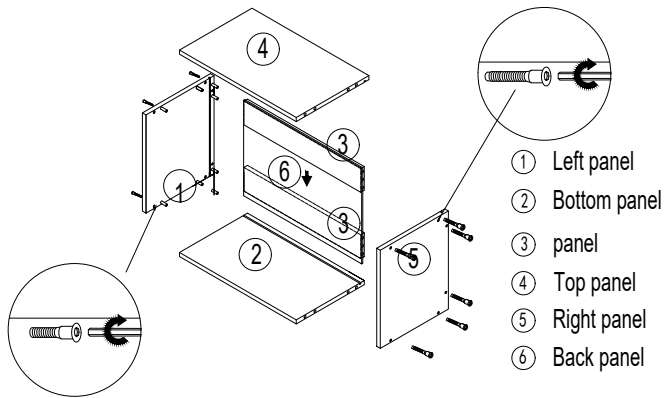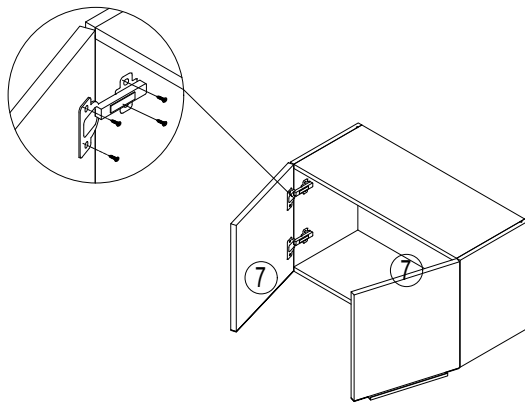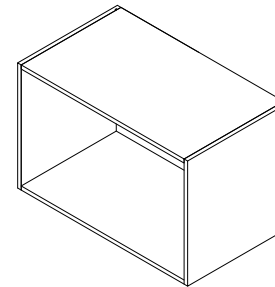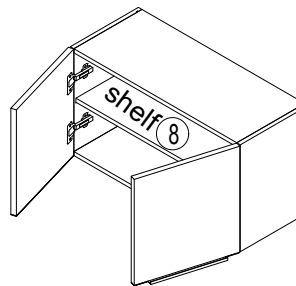

PICTURE	ITEM	SPEC
	Hinge	Damper hinges
	Tapping Screw	M6x50
	Dowel	Ø8x35
	Shelf support	Ø5
	Screw	Ø3.5x35

FITS CABFORD CODES
W3024 · W3624

1

Join the left panel (1) to the bottom (2) and top (4) with dowels and M6x50 connector screws.

2


Slide the back panel (6) down between the two rails (3).

3



Fix the right panel (5) with connector screws.

4

Mount the hinges, hang both doors (7) and set the shelf (8) on its supports.

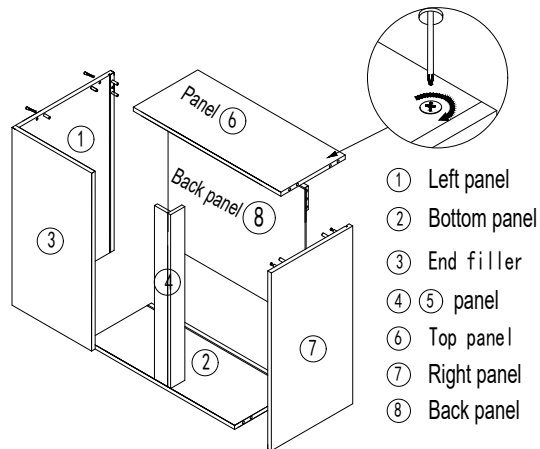

- ① Left panel
- ② Bottom panel
- ③ End filler
- ④ ⑤ panel
- ⑥ Top panel
- ⑦ Right panel
- ⑧ Back panel

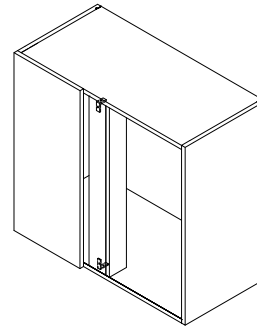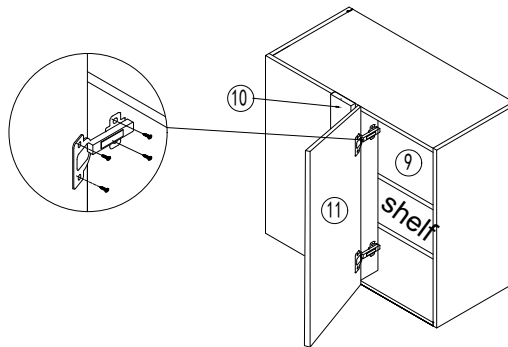

PICTURE	ITEM	SPEC
	Hinge	Damper hinges
	Tapping Screw	M6×50
	Dowel	Ø8×35
	Shelf support	Ø5
	Screw	Ø3.5×35

FITS CABFORD CODES

**WBC3030 · WBC3036
WBC3042**

1

Join the left panel (1) and end filler (3) to the bottom (2) with dowels and connector screws.

2


Add panels 4 and 5, slide in the back panel (8) and fix the top (6).

3

Fix the right panel (7) with M6×50 connector screws.

4

Hang the door (11) on its hinges and set the shelf (9) on its supports.

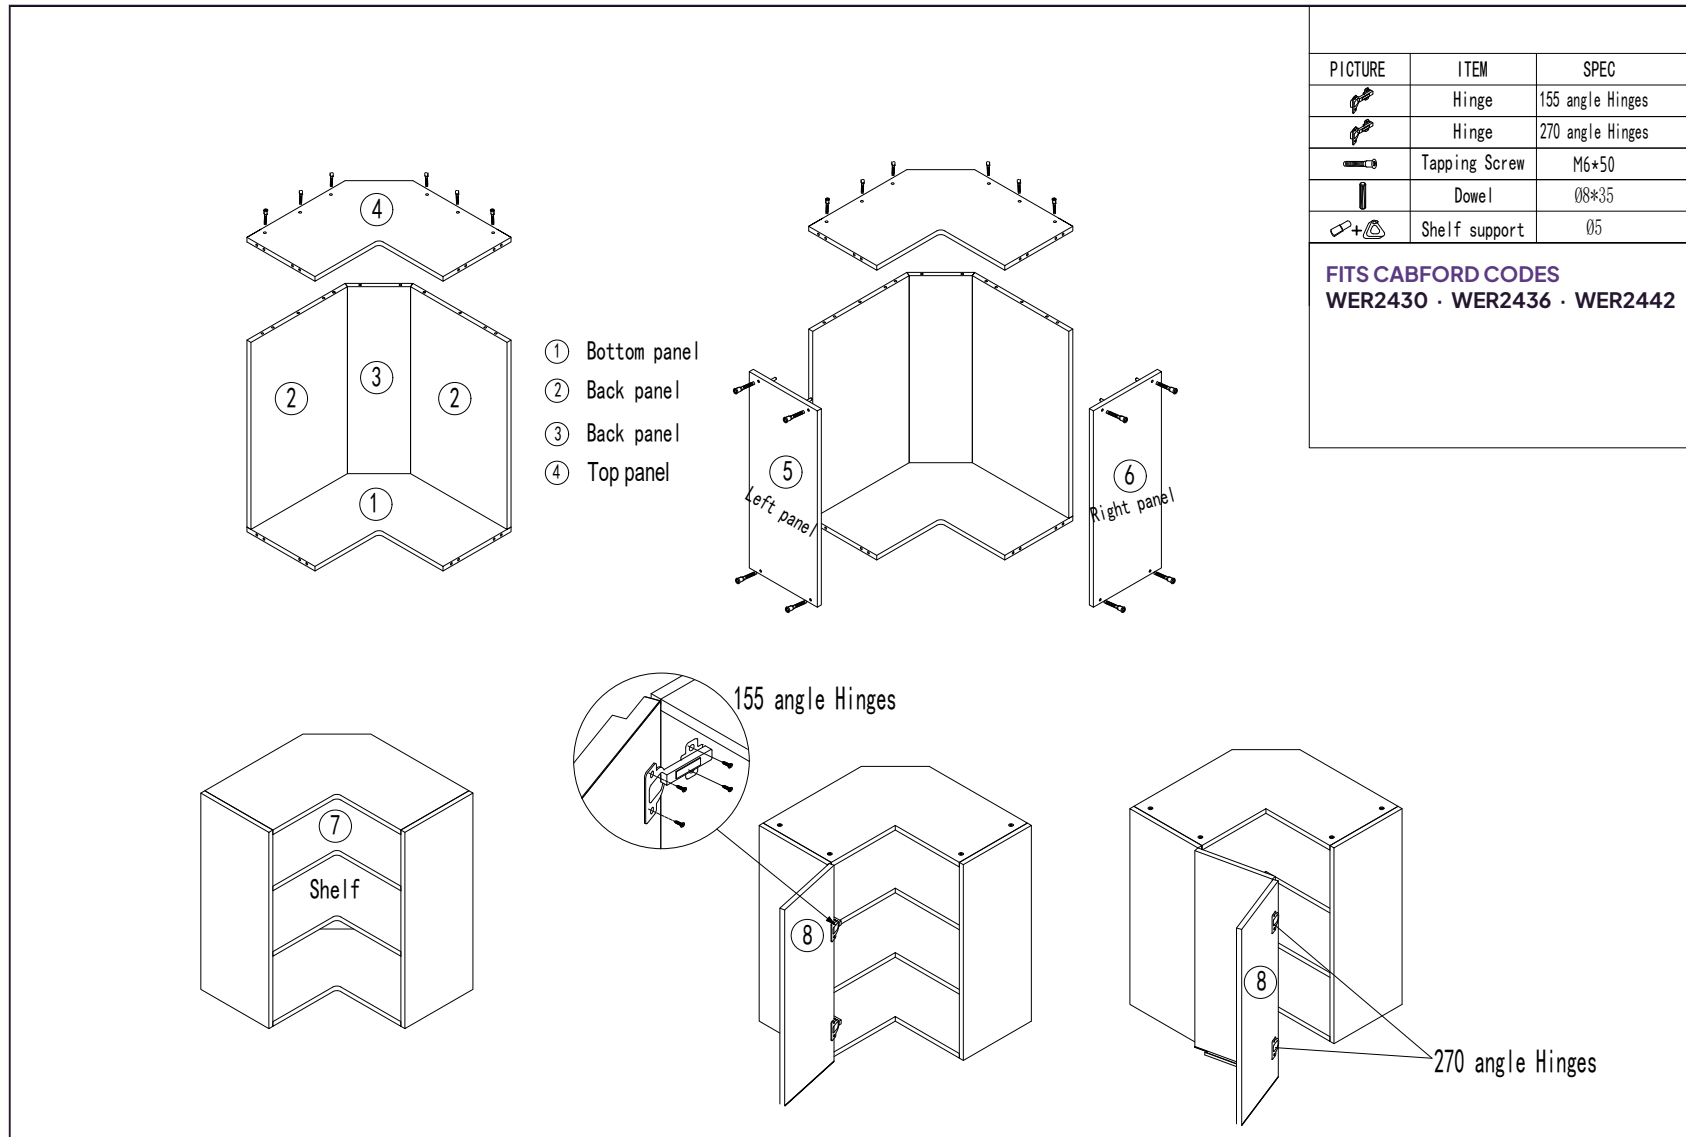

1

Join the back panels (2, 3) to the bottom (1), then fit the top (4).

2

Fix the left (5) and right (6) panels with M6x50 connector screws.

3

Set the shelves (7) on their supports.

4

Hang the door (8) with the 155° hinges, then fit the 270° hinges as shown.